


## Replacement of SD card in data logger

1. Please switch off the speed sign (unplug the battery white connector)
2. Please replace the SD card

SD card (please click it and take away)

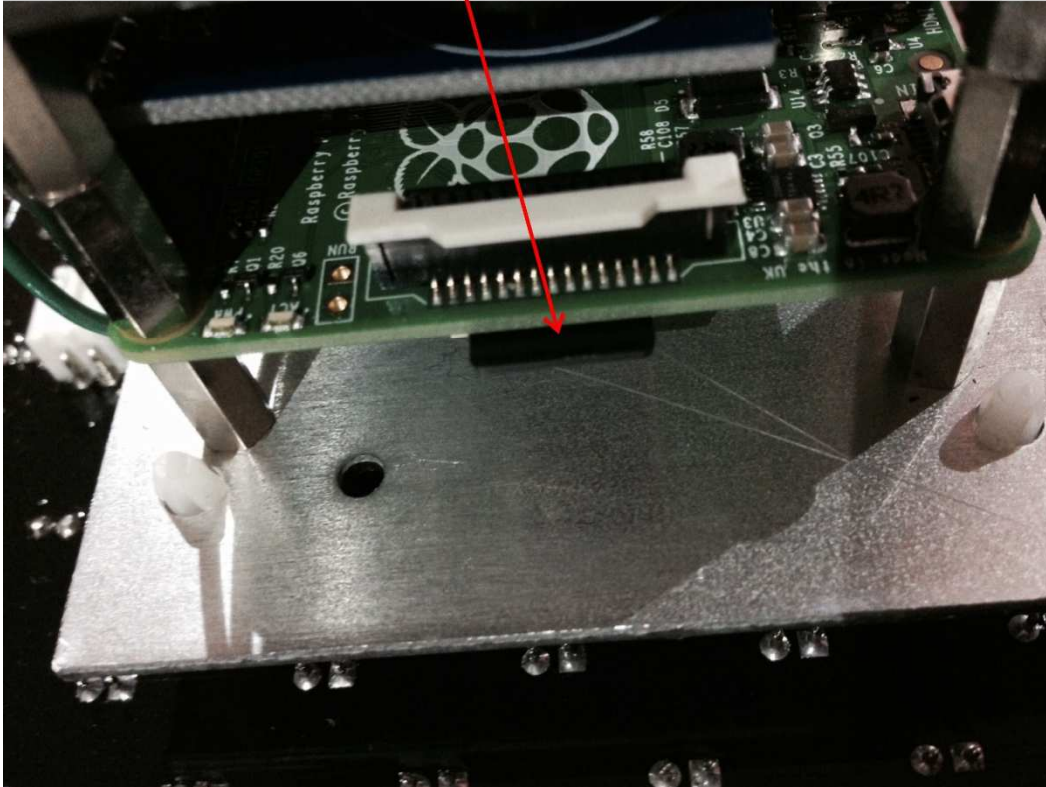

3. Please plug the battery connector for start-up again